

# Service Bulletin

## Secondary Keypad Options

*Applies to: E&S Series units, 8 Series OpenHub*



This bulletin supersedes earlier keypad document 637-1312. Please click the link below to jump directly to a section: Click any part number to order it directly from our website.

Please note any keypad labeled **Embedded** will only work with embedded consoles.

|                                                       |          |
|-------------------------------------------------------|----------|
| <i>8-Series Bikes/Crosstrainers/Steppers/Gauntlet</i> | <i>2</i> |
| <i>8-Series Treadmill/Treadclimber</i>                | <i>3</i> |
| <i>E-Series Bikes/Crosstrainers/Steppers</i>          | <i>4</i> |
| <i>E-Series Treadmill/Treadclimber</i>                | <i>6</i> |
| <i>S-Series Bikes/Crosstrainers/Steppers</i>          | <i>8</i> |
| <i>S-Series Treadmill</i>                             | <i>9</i> |

# Service Bulletin

## A. 8-Series Bikes/Crosstrainers/Steppers/Gauntlet

### Quickstart Keypad

Part Number: [050-2368](#)  
Plugs directly into PCB.



### Blank Overlay

Part Number: [701-0062](#)



### MYE 800/900MHz Keypad

Part Number: [050-2353](#)  
Plugs directly into Wireless Receiver Board.



### Embedded Keypad

Part Number: [050-2364](#)  
CCB PN: 701-0143


CCB is only sold in a kit with the keypad  
Part Number: [701-0061](#)



### PVS Keypad

Part Number: [050-2365](#)  
CCB PN: [715-3911](#)

CCB is only sold in a kit with the keypad  
Part Number: [701-0061-KT](#)

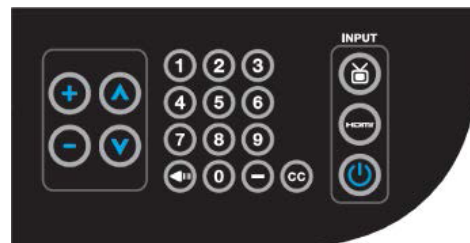

# Service Bulletin

## B. 8-Series Treadmill/Treadclimber

### Quickstart Keypad

Part Number: [050-2363](#)  
Plugs directly into PCB.



### Blank Overlay

Part Number: [701-0062](#)



### MYE 800/900MHz Keypad

Part Number: [050-2353](#)  
Plugs directly into Wireless Receiver Board.



### Embedded Keypad

Part Number: [050-2364](#)  
CCB PN: 701-0143


CCB is only sold in a kit with the keypad  
Part Number: [701-0061](#)



### PVS Keypad

Part Number: [050-2365](#)  
CCB PN: [715-3911](#)

CCB is only sold in a kit with the keypad  
Part Number: [701-0061-KT](#)

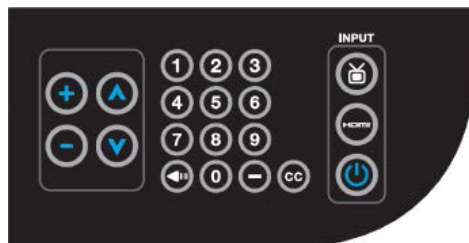


# Service Bulletin

## C. E-Series Bikes/Crosstrainers/Steppers

### Quickstart Keypad

Part Number: [050-2028](#)  
Plugs directly into PCB.

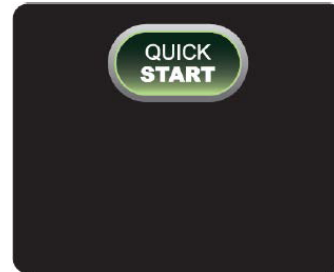

### Upper Only, Quickstart Keypad

Part Number: [050-2203](#)  
Plugs directly into PCB.



### Lower Only, Blank Overlay

Part Number: [050-2221](#)




### Quickstart, iPod with PVS

Part Number: [050-2027](#)  
CCB PN: [718-5092](#)



### Quickstart, USB/iPod

Part Number: [050-2146](#)  
CCB PN: [718-5155](#)

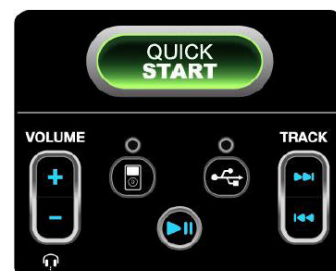



# Service Bulletin

## Quickstart, USB/iPod, MYE with 800/900Mhz

Part Number: [050-2147](#)

Plugs directly into Wireless Receiver Board.



## Lower Only, USB/iPod, PVS with 800/900Mhz

Part Number: [050-2209](#)

Plugs directly into Wireless Receiver Board.



## Quickstart, USB/iPod/Embedded

Part Number: [050-2148](#)

CCB PN: [718-5156](#)



## Lower Only, USB/iPod/Embedded

Part Number: [050-2207](#)

CCB PN: [718-5156](#)




# Service Bulletin

## D. E-Series Treadmill/Treadclimber

### Quickstart & Stop

Part Number: [050-2030](#)  
Plugs directly into PCB.

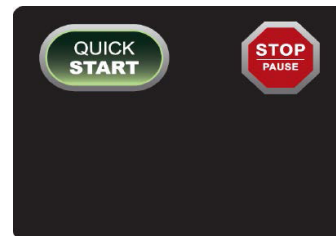

### Upper Only, Quickstart & Stop

Part Number: [050-2204-KT](#)  
Plugs directly into PCB.



### Lower Only, Blank Overlay

Part Number: [050-2221](#)




### Quickstart & Stop, USB/iPod

Part Number: [050-2149](#)  
CCB PN: [718-5155](#)



### Lower Only, USB/iPod

Part Number: [050-2208](#)  
CCB PN: [718-5155](#)

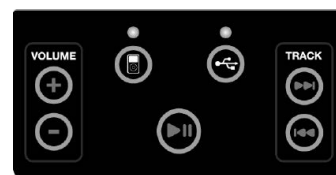


# Service Bulletin

## Quickstart & Stop, iPod with PVS

Part Number: [050-2031](#)

CCB PN: [718-5092](#)

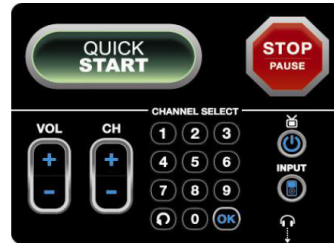

## Lower Only, iPod with PVS

Part Number: [050-2248](#)


CCB PN: [715-3911](#)



## Quickstart & Stop, USB/iPod, MYE with 800/900Mhz

Part Number: [050-2150](#)

Plugs directly into Wireless Receiver Board.

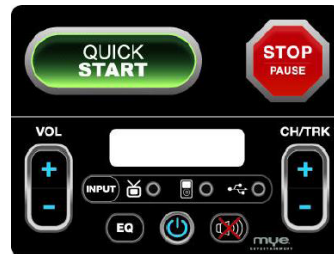

## Lower Only, MYE with 800/900Mhz

Part Number: [050-2255](#)


Plugs directly into Wireless Receiver Board.



## Quickstart & Stop, USB/iPod/Embedded

Part Number: [050-2151](#)

CCB PN: [718-5155](#)

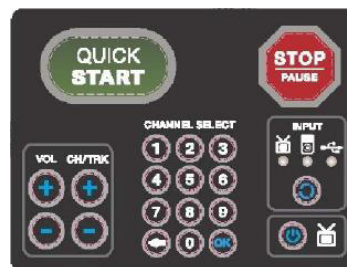

# Service Bulletin

## E. S-Series Bikes/Crosstrainers/Steppers

### PVS Control

Part Number: [740-0014](#)

CCB PN: [718-5092](#)



### PVS Control

Part Number: [050-2218](#)

CCB PN: [718-5092](#)




# Service Bulletin

## F. S-Series Treadmill

### PVS Control

Part Number: 050-2219

CCB PN: [718-5092](#)

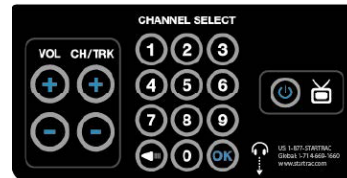

### PVS Control

Part Number: [740-6038-KT](#)

CCB PN: [718-5092](#)

