

## GENERAL INFORMATION

### How to Access Maintenance Mode on Cardio Consoles

Applies to: 4, 8, and 10-Series Cardio Consoles

Please see below for instructions on accessing the maintenance mode on the 4-Series and 8-Series, and 10-Series cardio consoles.

#### 8/10-Series Treadmill / TrailHiker LCD - No Quick Keys

On the keypad, press “0”, “2”, and “OK” at the same time, then use the hotbar to change the menu selection and “OK” to enter that sub-menu.



SKU(s): 700-0360-XX + 700-0282-XX

#### 8/10-Series Treadmill LCD - No Quick Keys

On the keypad, press “0”, “2”, and “OK” at the same time, then use the hotbar to change the menu selection and “OK” to enter that sub-menu.



SKU(s): 700-0288-XX

#### 8/10-Series Treadmill 10” Touchscreen

Tap the upper left corner of the screen, then the center of the screen, then the upper left corner of the screen to access the maintenance menu.



SKU(s): 700-0379

## GENERAL INFORMATION

### 8/10-Series Treadmill 19" Embedded

1. Tap the upper left corner of the screen, then the upper right corner of the screen, then the upper left corner again.
2. On the Password screen, enter "218" then press "OK".



SKU(s): 700-0463-XX + 700-0466-XX

### 8/10-Series Bike / CrossTrainer / Stepper / Stepmill LCD

On the keypad, press "0", "2", and "OK" at the same time, then use the hotbar to change the menu selection and "OK" to enter that sub-menu.



SKU(s): 700-0283-XX + 700-0396-XX + 700-0303

### 8/10-Series Bike / CrossTrainer / Stepper / Stepmill 10" Touchscreen

Tap the upper left corner of the screen, then the center of the screen, then the upper left corner of the screen to access the maintenance menu.



SKU(s): 700-0378-XX + 00-0380-XX

## GENERAL INFORMATION


## 8/10-Series Bike / CrossTrainer / Stepper / Stepmill 15" Embedded

1. Tap the upper left corner of the screen, then the upper right corner of the screen, then the upper left corner again.
2. On the Password screen, enter "218" then press "OK".



SKU(s): 700-0471-XX + 700-0472-XX + 700-0468-XX + 700-0469-XX

## 4-Series Treadmill / Bike / Crosstrainer LCD

On the keypad, press “0”, “2”, and “OK” at the same time, then use the enter button  to enter that sub-menu.



SKU(s): 700-0464-XX + 700-0465-XX

## 4-Series Treadmill / Bike / Crosstrainer 10" Touchscreen

Tap the upper left corner of the screen, then the center of the screen, then the upper left corner of the screen to access the maintenance menu.



SKU(s): 700-0506-XX + 700-0507-XX

## GENERAL INFORMATION

### 4-Series Treadmill / Bike / Crosstrainer 15" Embedded

1. Tap the upper left corner of the screen, then the upper right corner of the screen, then the upper left corner again.
2. On the Password screen, enter "218" then press "OK".



SKU(s): 700-0508-XX + 700-0510 + 700-0509-XX + 700-0511-XX