

# SERVICE INSTRUCTIONS FOR CLIPLESS PEDAL

Before use, read these instructions carefully.

## Cautions

- Practice engaging and disengaging from the pedals several times in a stationary position before riding.
- **Before** using, please lubricate the concave area of the clip.
- Keep the cleat and pedal clean to ensure proper usage.
- The cleat of our **clipless** is adaptable for all standard SPD shoes. This cleat allows for a 4 degree lateral foot rotation, just enough to relieve knee stress.
- Before using, please adjust the retention force of the pedal to suit yourself.




## Installation of the cleat

1. Remove the pad from the shoe using a pair of pliers.



2. Remove the sockliner, and install the cleat set as per following illustration, then secure the cleat tightly with the bolt.

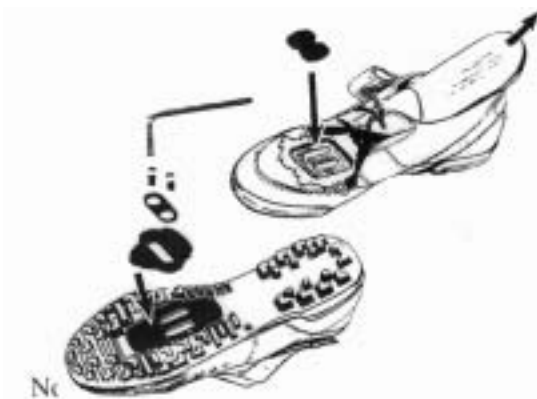

1. Please adjust the best cleat position to fit pedal.

- ⚠️ \*\*pedal must to be changed after 6 months usage
- \*\* please check your pedal before your riding everytime
- \*\* please change the pedal when it starts to have play on the **axle/pedal** or you might have potential danger

## Use

- **Engaging**  
Press the cleat into the pedal.



- **Disengaging**  
Remove by twisting your heel to the outside.



- **Adjusting Retention force**  
The tension of the spring is adjusted for each pedal (top & bottom) with the adjustment bolt in the rear.

Turn the bolt in a clockwise direction to increase retention force, and in a counterclockwise direction to decrease retention force.



Adjusting bolt

Please note there are 2 adjustment bolts on each pedal.