


PARTS REMOVAL AND REPLACEMENT

CONSOLE

1. Remove the four mounting knobs from the back of the console.
2. Disconnect the main cable, contact heart rate cables (4600 PT/CL), and Polar® cable (4600/4400 PT/CL) from the back of the console. Lift the console off the machine.
3. Reverse the steps to reinstall the console.

CONSOLE ADJUSTMENT

1. Loosen the console bracket wing nut.
2. Pivot the console up or down to adjust the console to desired viewing angle and then tighten the wing nut.

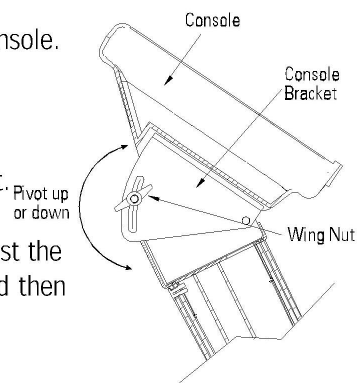

POLY-V AND HTD BELT



WARNING

THE BELTS MUST BE PROPERLY TENSIONED. A BELT THAT IS TOO TIGHT WILL CAUSE SLOW AND SLUGGISH OPERATION. A BELT THAT IS TOO LOOSE WILL CAUSE EXCESSIVE NOISE AND BELT WEAR.

1. Remove the bottom cover.
2. Loosen the adjustment bolt that mounts the alternator to the slotted alternator brace and the pivot adjusting bolt and nut. Swing the alternator down.
3. Remove the Poly-V belt.
4. Slide the HTD belt toward you and off the HTD pulley. Remove the belt from the machine.
5. Reinstall the HTD belt.