


Walk Deck Assembly

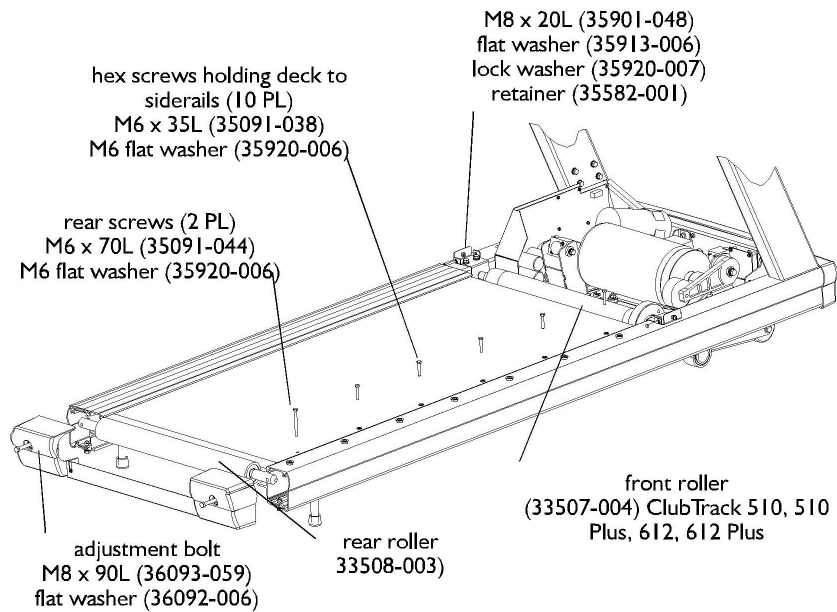

Replacing the Rollers

1. Turn off the treadmill circuit breaker and unplug the power cord. Remove the hood as previously described.
2. Remove the poly-V belt as described previously.
3. Loosen tension on the walk belt. Remove the endcaps completely.
4. Pull the walk belt towards the rear of the deck, then slide the rear roller assembly out from between the walk belt toward the side of the treadmill.
5. Lift the front roller out from under the walk belt.
6. Replace the rollers and reassemble the treadmill following Steps 1-4 in reverse order. See Installing the Front Shaft earlier in this chapter.
 - ▶ If the adjusting bolts will not thread into the shaft, check the part number of the replacement bolt. This shaft has metric threads.
7. Adjust the walk belt tension and tracking.

Field Functional Test

To verify proper operation, perform Field Test No. 3. See Appendix D, Field Functional Tests, for specific instructions.