# DIAGNOSTICS: INFORMATION – CLOCK INFO MODE

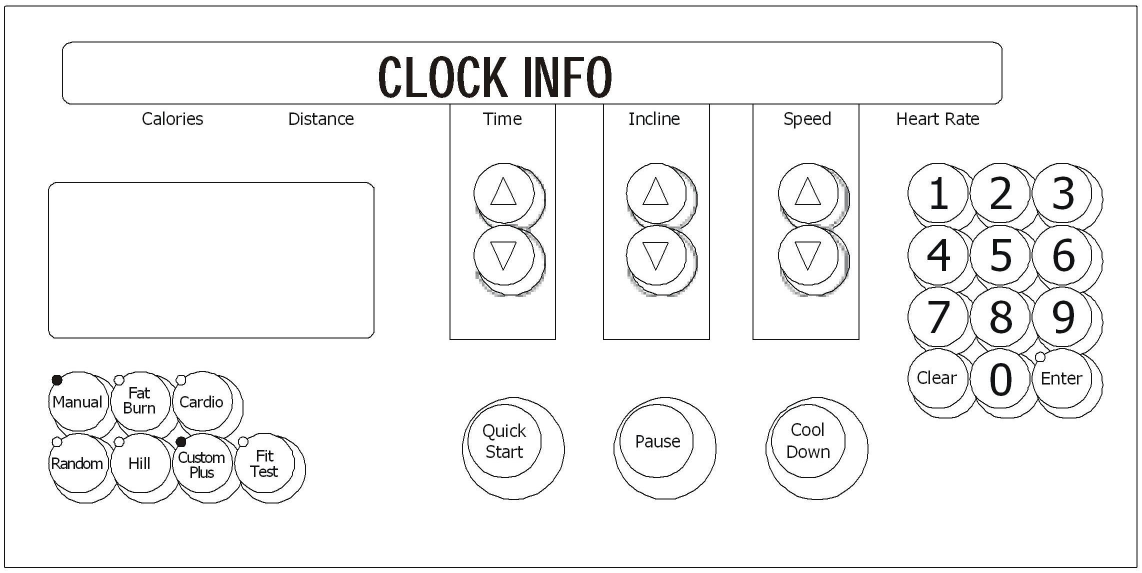


This area will allow the user to see the current information about the real time clock. The information will cover the following areas:

**DISPLAYED INFORMATION**

FRAME CLOCK COMM BAD
FRAME TAG UNPLUGGED
CURRENT SETTING FOR REAL TIME CLOCK

Press the 'CLEAR' key to exit the Real Time Clock Info and return to the System Info Menu.