DIAGNOSTICS: SYSTEM TEST – DISPLAY CONSOLE EEPROM TEST MODE

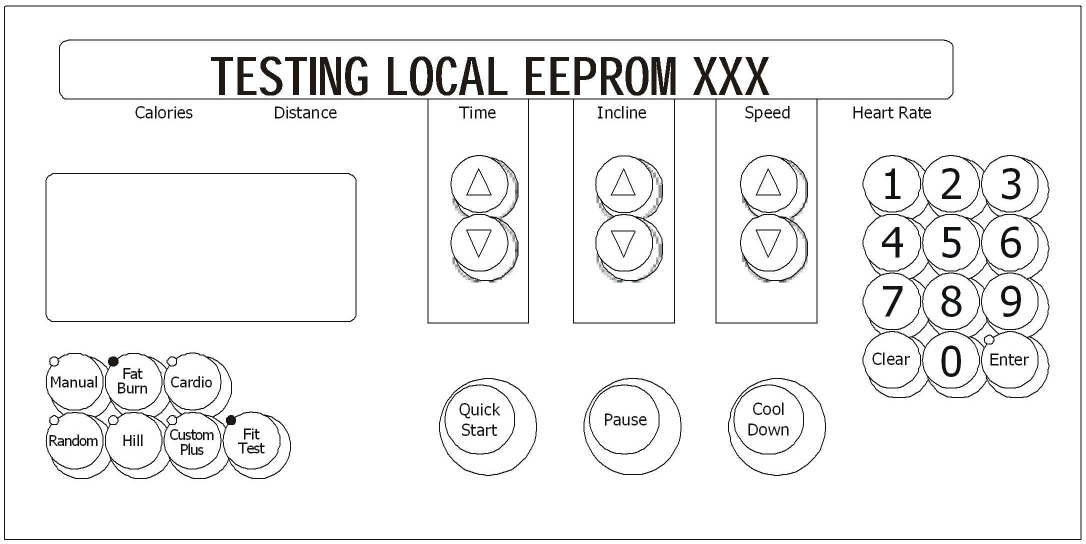

This test allows the user to test the display console EEPROM. This test will read/write/replace all used locations in the display console EEPROM. The EEPROM location being tested will be displayed in the heart rate window. If there is an error, the bad location will be displayed.

The following is a list of current information that can be seen. In an error has occurred, refer to the troubleshooting section for corrective action.

DISPLAYED INFORMATION	**ERROR CONDITION**
TESTING LOCAL EEPROM	EEPROM BAD AT XX
EEPROM TESTED GOOD	

Press the ‘CLEAR’ key to exit the Display Console EEPROM test and return to the System Test Menu.