


HANDLE ASSEMBLY

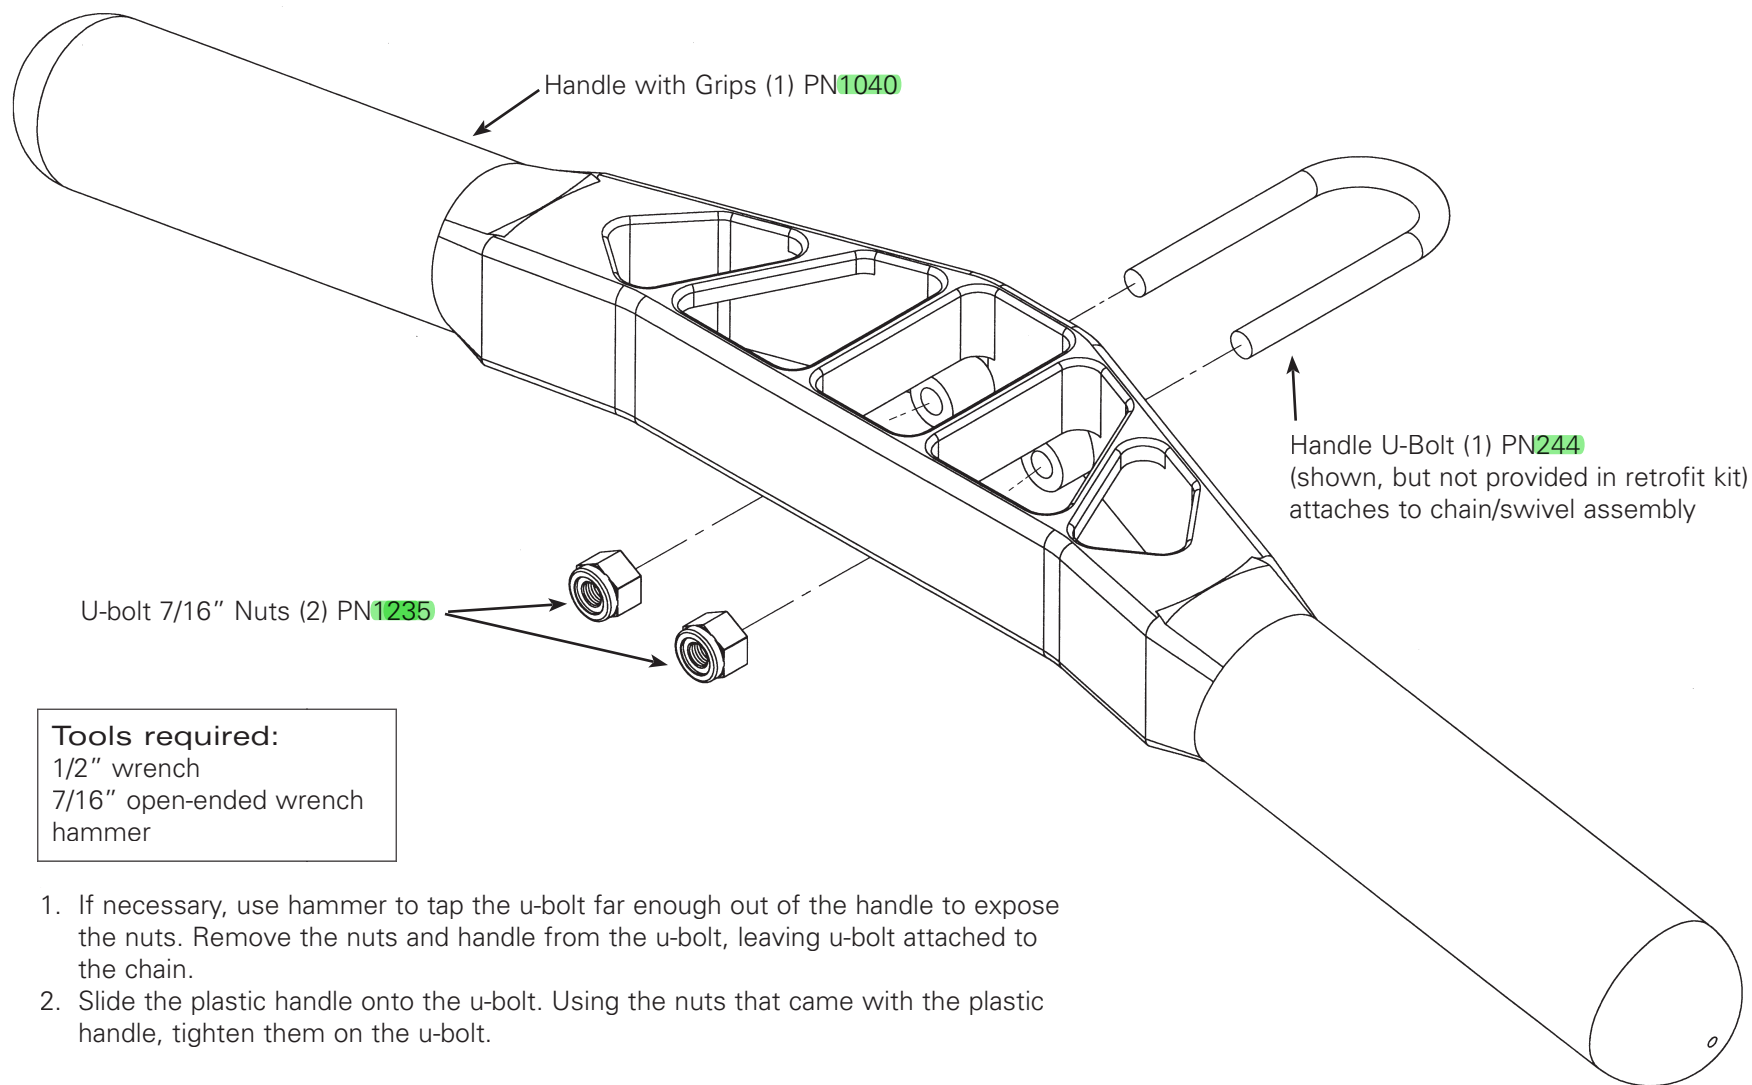

Tools required:

1/2" wrench
7/16" open-ended wrench
hammer

1. If necessary, use hammer to tap the u-bolt far enough out of the handle to expose the nuts. Remove the nuts and handle from the u-bolt, leaving u-bolt attached to the chain.
2. Slide the plastic handle onto the u-bolt. Using the nuts that came with the plastic handle, tighten them on the u-bolt.