


## Replace Control Link

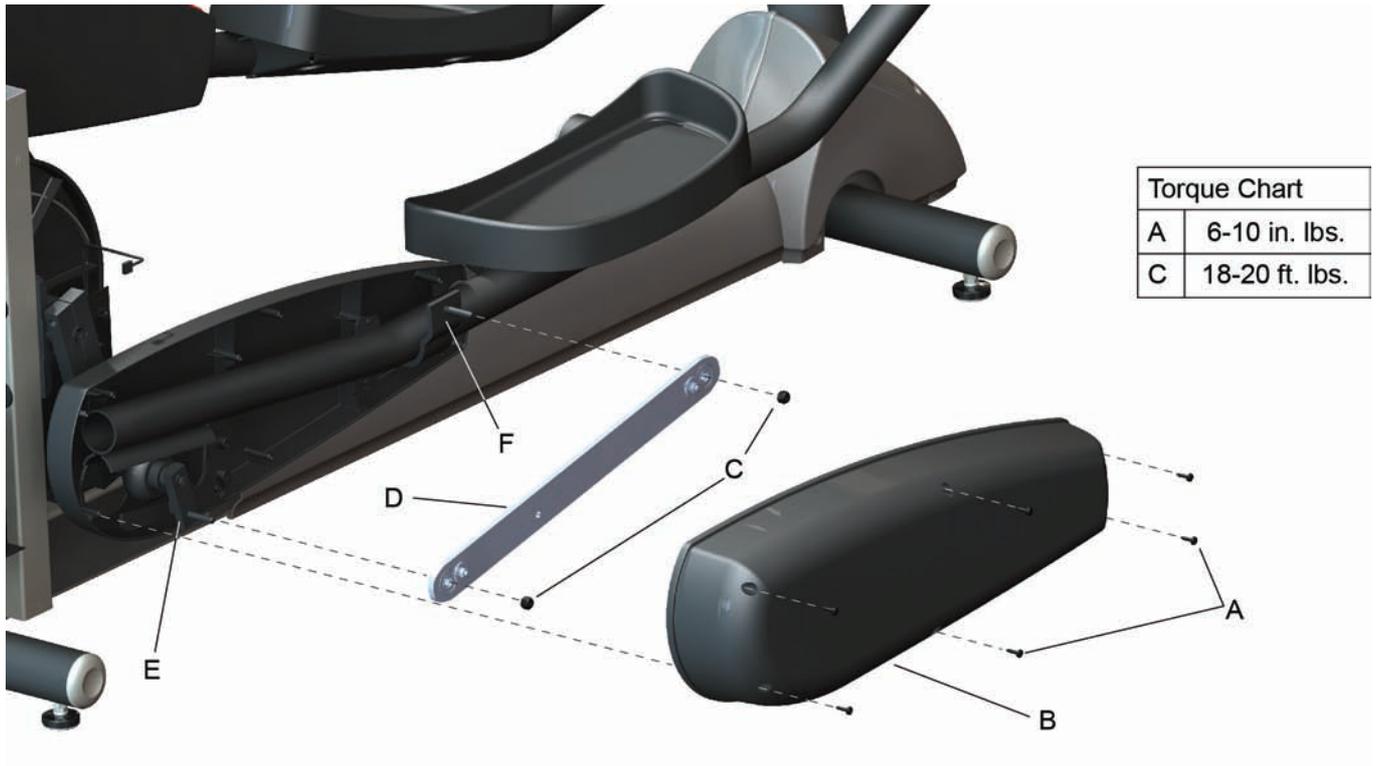

**Tools required:** Phillip #2 magnetic screwdriver, 5mm Allen wrench set, 6mm and 1/2" socket, 1/2" wrench

1. Remove *six screws (A)* from the *(B) outer link cover* and remove cover.
2. Remove two *hex nuts (C)* securing the *control link (D)* to the *arm extension (E)* and *pedal arm (F)*.
3. Discard the *control link (D)* and hardware.
4. Install new control link in reverse order.

**Note:** An identification mark on the control link must face towards the front of the machine.

- Using a small amount of grease between the inner race of the bearing and sleeve, attach the tie rod at the rear of the machine first, then at the front.

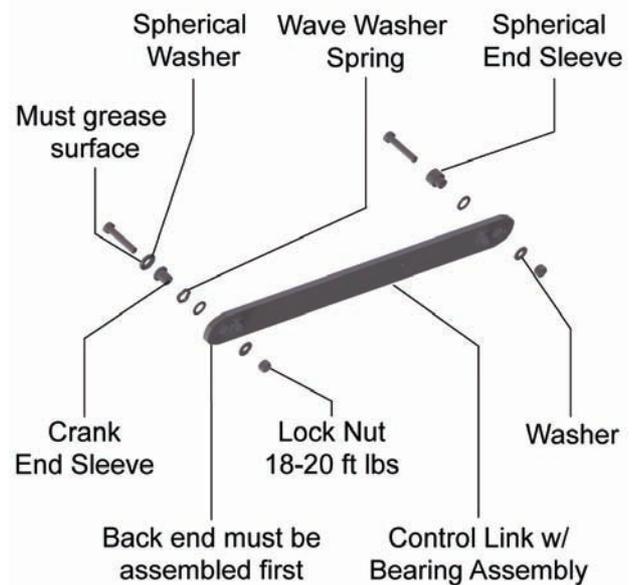


Figure 2