

Prepared by: ICG Service Department	Date Prepared: 9/7/2016
Time Required: 30 minutes	Models Affected: Matrix IC5, Matrix IC7

DESCRIPTION

Follow the instructions below to remove the shroud. This process is also shown in the video "Matrix IC7 - Shrouds Disassembly": <https://www.youtube.com/watch?v=JXR7nVebjY8&feature=youtu.be>



PROCEDURE

Important: Make sure to follow the instructions and set the seat post and handlebar post at the highest position. (This will help prevent cables from becoming pinched, and also keep cables out of your way.)



- 1.1** Open the seat height adjustment by lifting the lever into the horizontal position and fully extend the seat post.



- 1.2** Remove seat post cover by removing 2 bolts with a 2 mm Allen key and 1 bolt with a 3 mm straight Allen key.



- 1.3** Remove brake dial cap by carefully by lifting the cover with a small 2 mm flat headed bolt driver.



- 1.4** Remove 1 bolt with a 3 mm Allen key and lift cap to remove.



1.5 Remove 4 bolts with 2 mm Allen key.



1.6 Lift handlebar top cover



1.7 Open lever to (horizontal) position and extend the stem.



1.8 Remove 2 bolts with a 3 mm straight Allen key




1.9 Lift seat post and handlebar top cover and remove top main cover.



1.10 Remove 14 bolts from the shroud on the right side with a 3 mm straight Allen key.



1.11 Turn the crank to the above position so the shroud can be maneuvered past the pedal

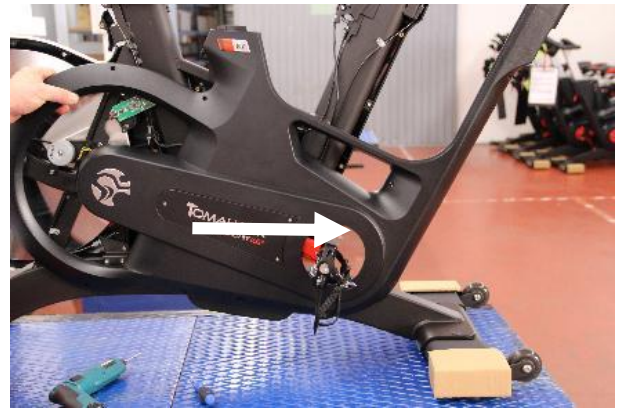

1.12 Carefully slide the shroud towards the pedal



1.13 Slightly tilt the shroud and gently pull it by the pedal without detaching the rubber spacers from the shroud.

Reverse these steps to reattach the shroud.

Tip!

There are 13 rubber spacers on each shroud.
If a rubber spacer falls off the shroud, use superglue to fasten it back in its position.

