

Life Fitness Model 9000 Treadmill

How To...INSTALL THE AUTOMATIC WAXING SYSTEM

Tools Required: Phillips screwdriver, Scissors

Step 1

While standing next to the treadmill, enter the diagnostic mode by pressing **9-1-9, ENTER**. Press and hold the INCLINE UP ARROW KEY until the incline percentage reaches 12.0.

Step 2

Turn the unit **OFF** at the I/O switch to keep the treadmill elevated. Unplug the unit from the electrical outlet.

Step 3

With the help of another person, tilt the unit onto its user right side.

For Refills...

Step 4

Remove the two PHILLIPS SCREWS from the LUBRICANT BAG COVER. Guide the two tabs on the LUBRICANT BAG COVER out of the two slots in the MOTOR PAN and remove the LUBRICANT BAG COVER from the treadmill. Close the FLOW CONTROL CLAMP on the INLET TUBE and remove the empty LUBRICANT BAG from the treadmill by opening the HOSE CLAMP and disconnecting the HOSE from the INLET TUBE barbed fitting.

Step 5

- Turn the power **ON** at the I/O switch.
- Press **CLEAR** twice.
- Enter the Diagnostic mode by pressing **5-1-2-5**, then **ENTER**.
- Press **ENTER** key to clear wax stats.
- Press the **STOP** key to exit diagnostics.


For New Installations...

Step 4

Remove the retaining tape that holds the INLET TUBE to the underside of the MOTOR PAN. Extend the INLET TUBE out to the right side of the unit.

Step 5

Attach the FLOW CONTROL CLAMP (included in Lubricant kit) to the new LUBRICANT BAG TUBING and close the CLAMP to fully seal the tube. Cut the LUBRICANT BAG TUBING approximately 3/4" from the plugged end. Discard the BARBED PLUG.

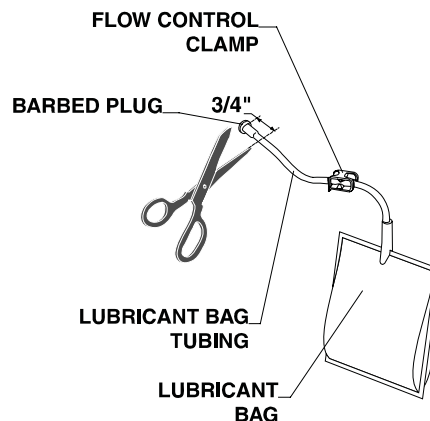

Step 6

Attach the LUBRICANT BAG tube to the barbed fitting at the end of the INLET TUBE.

Step 7


Release the FLOW CONTROL CLAMP.

Step 8

Place the LUBRICANT BAG into the BAG COVER and orient the bag as shown at right. Position the BAG COVER under the treadmill. The TUBING will fold across the top of the BAG.

Step 9

Attach the LUBRICANT BAG COVER to the MOTOR PAN by sliding the two tabs on the COVER into the two slots in the MOTOR PAN. Secure the cover to the MOTOR PAN with the two PHILLIPS SCREWS.

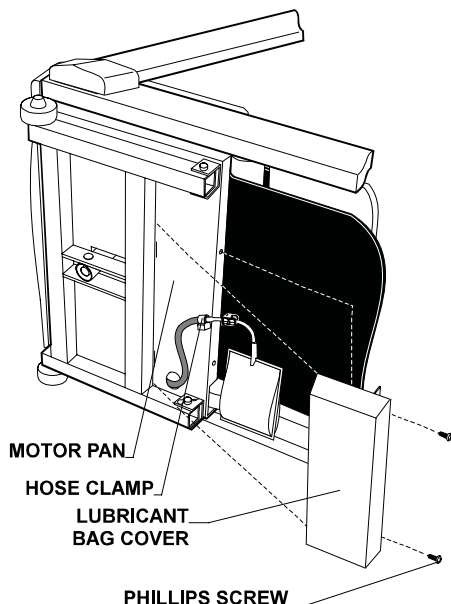

NOTE: BE CAREFUL NOT TO PINCH THE LUBRICANT BAG OR THE TUBING BETWEEN COVER AND MOTOR PAN.