


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
DIAGNOSTICS: SYSTEM TEST – DISPLAY TEST MODE

This test will light each individual segment per character until complete. It will then light each character separately until all characters have been lit. Each individual led will be tested also. If the 'PAUSE' key is pressed, the sequence will halt and remain there until the 'PAUSE' is pressed again.

Pressing the 'PAUSE' key can LOCK the display. This will prohibit the scrolling of the LED's.
 Pressing the 'CLEAR' key to exit the Walking Led test and return to the Keypad test.

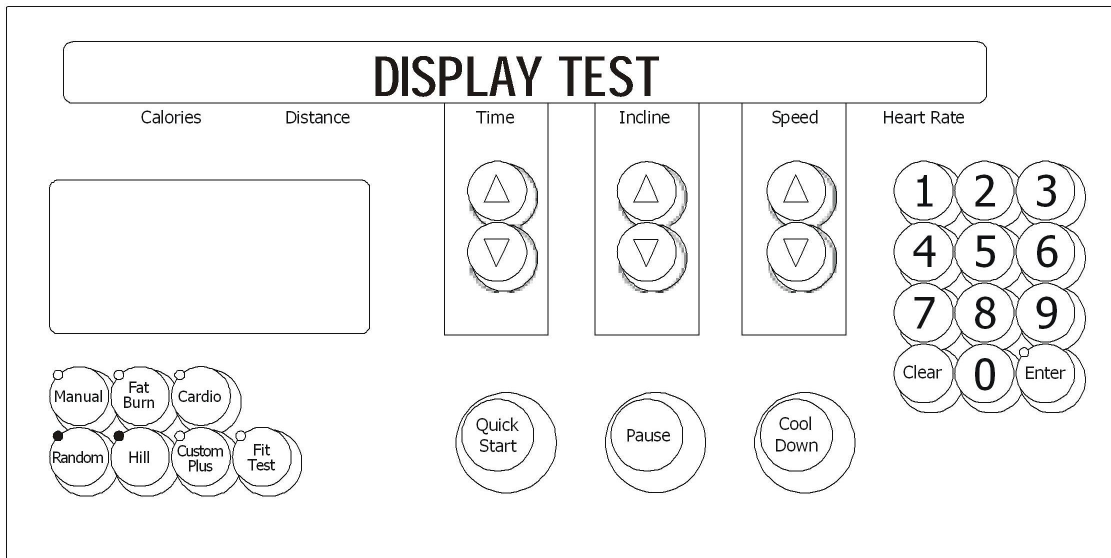

Upon entry to this test, all lights will be turned ON. This test will allow the user to test the display console.

Pressing keys will result in a beep sound and, for all but the 'ENTER' and 'CLEAR' keys, a character will be repeated across the message center display.

<u>KEYS</u>	<u>DISPLAYED CHARACTER</u>	<u>KEYS</u>	<u>DISPLAYED CHARACTER</u>
0	'0'	FIT TEST	'L'
1	'1'	TIME UP	'N'
2	'2'	INCLINE UP	'P'
3	'3'	SPEED UP	'Q'
4	'4'	TIME DOWN	'R'
5	'5'	INCLINE DOWN	'T'
6	'6'	SPEED DOWN	'U'
7	'7'	QUICK	'V'
8	'8'	PAUSE	'W'
9	'9'	COOL DOWN	'X'
MANUAL	'C'	STOP	'Y'
FAT BURN	'D'	DOWN	'Z'
CARDIO	'E'	UP	'S'
RANDOM	'H'		
HILL	'J'		
CUSTOM	'K'		

Pulling the Emergency Stop switch will result in the message:
 'REPLACE EMERGENCY STOP SWITCH'.

Pressing the 'CLEAR' key to exit the Display test and return to the System Test Menu.
 Pressing the 'ENTER' key will advance to Walking Led test.