

The controller for the integrated PVS15 has been redesigned. The control keys have been repositioned on the panel to provide better ergonomics for the end user. The design change also incorporates a new key sequence to enter the PVS15's settings mode.

The illustrations below show the new and old key configurations for the PVS15 and the key sequence needed to enter the settings mode.

### PVS15 Integrated Controller - New Design




1. Press the **Power On/Off** key to turn on the PVS.
2. Hold the **Channel Down** key, the **Volume Up** key, and **Power On/Off** key at the same time for three seconds.

The Systems settings menu should appear and the power light should flash red and blue indicating that you are in the settings mode.

**Note:** If you do not press a button within 15 seconds the PVS screen returns to the normal viewing mode.

### PVS15 Integrated Controller - Previous Design

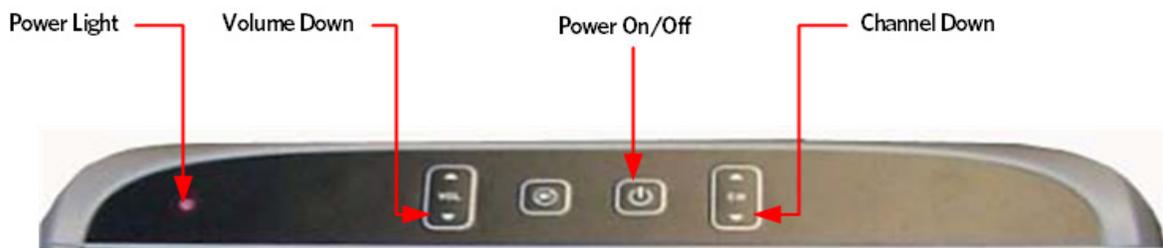

1. Press the **Power On/Off** key to turn on the PVS. The power light will be blue when the PVS is on.
2. Hold the **Channel Down** key at the same time as the **Volume Down** key for three seconds.

The Systems settings menu should appear and the power light should flash red and blue indicating that you are in the settings mode.

**Note:** If you do not press a button within 15 seconds the PVS screen returns to the normal viewing mode.

Please contact Precor Customer Support with any questions regarding this service bulletin @ **1-800-786-8404**.