


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
DIAGNOSTICS: INFORMATION – MAINTENANCE INFO MODE



This area will allow the user to see the last 12 logged system repairs. The repair information will be displayed from the most recently logged to the oldest. Each system repair will be displayed in the following format.

PROCEDURE# DATE OCCURRED BRIEF EXPLANATION

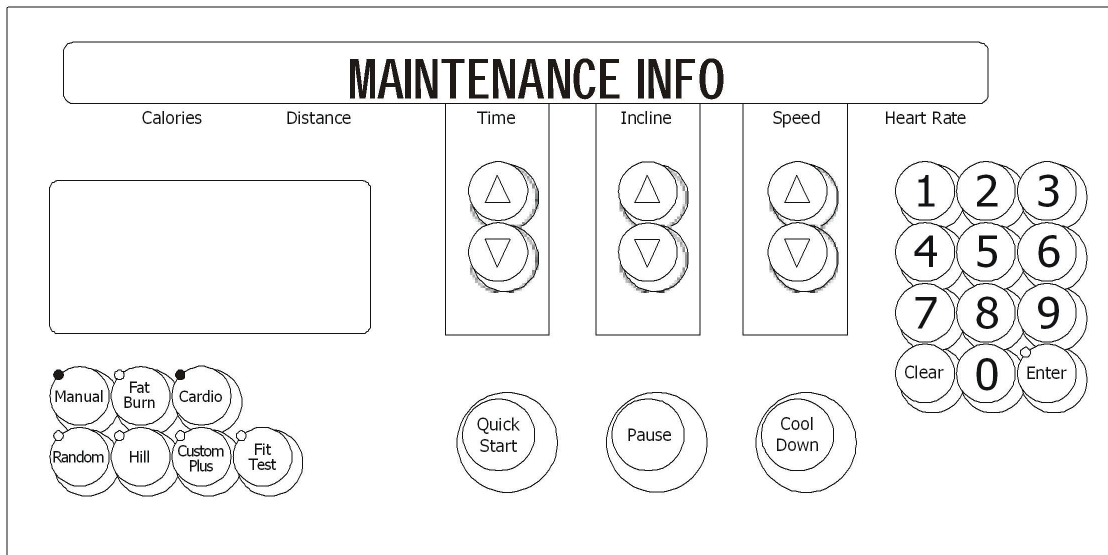

This format allows the user to scroll through all logged system repairs without seeing any repair details. The system repairs will be scrolled automatically every 3 seconds or can be scrolled by using any of the arrow keys.

If the user wants to see the details about a repair procedure, the user must press the 'ENTER' key when the repair title is displayed on the message center.

When the 'ENTER' key is pressed, all of the repairs procedure details will begin to display. These repair details will scroll automatically every 3 seconds or can be scrolled by using any of the arrow keys.

Press the 'ENTER' key to view system repair procedure. Detail repair log as needed.
 Press the 'CLEAR' key to exit the System Repair and return to the System Info Menu.