


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
MAINTENANCE CONFIGURATION – QUICK ENTRY REFERENCE

Diagnostics selections can also be made on the TR9700HR and TR9500HR by pressing a combination of program keys. The following is the list of diagnostic tests and their program key combination. All blank fields in the chart are considered "OFF" for that program key.

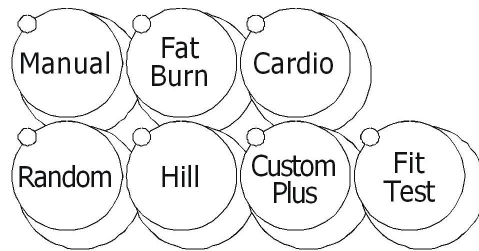

| SERVICE MENU | | | | | | | |
|---------------------------|--------|----------|--------|--------|------|--------|----------|
| DIAGNOSTIC TESTS | MANUAL | FAT BURN | CARDIO | RANDOM | HILL | CUSTOM | FIT TEST |
| MAIN MOTOR MODULE | | | | | | | |
| SPEED AUTO | | | | ON | | | |
| SPEED MANUAL | ON | | | ON | | | |
| SPEED ERROR | | | | ON | | ON | |
| SPEED INFO | | | ON | ON | | | |
| LIFT MOTOR MODULE | | | | | | | |
| INCLINE AUTO | | | | | ON | | |
| INCLINE MANUAL | ON | | | | ON | | |
| INCLINE ERROR | | | | | ON | ON | |
| INCLINE INFO | | | ON | | ON | | |
| WAXER MOTOR MODULE | | | | | | | |
| WAXER AUTO | | | | | | | ON |
| WAXER MANUAL | ON | | | | | | ON |
| WAXER ERROR | | | | | | ON | ON |
| WAXER INFO | | | ON | | | | ON |
| SYSTEM TESTS | | | | | | | |
| BELT/DECK TEST | | | | | | ON | |
| LIFEPULSE TEST | | ON | | | | | |
| TELEMETRY TEST | | | ON | | | | |
| SMART STOP TEST | | ON | | | ON | | |
| DISPLAY TEST | | | | ON | ON | | |
| COMM TEST | | | | ON | | | ON |
| TAG EEPROM TEST | | | | | ON | | ON |
| CONSOLE EEPROM TEST | | ON | | | | | ON |
| LIFECENTER TEST | | ON | | | | ON | |
| FITLINXX TEST | | | ON | | | ON | |
| INFORMATION | | | | | | | |
| STATISTICS | | ON | ON | | | | |
| SOFTWARE VERSION | | ON | | ON | | | |
| CLOCK INFO | ON | | | | | ON | |
| SYSTEM ERROR INFO | ON | ON | | | | | |
| SYSTEM REPAIR INFO | ON | | ON | | | | |
| MAINTENANCE | ON | | | | | | |