


Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
DIAGNOSTICS: INFORMATION – LIFT MOTOR INFO MODE

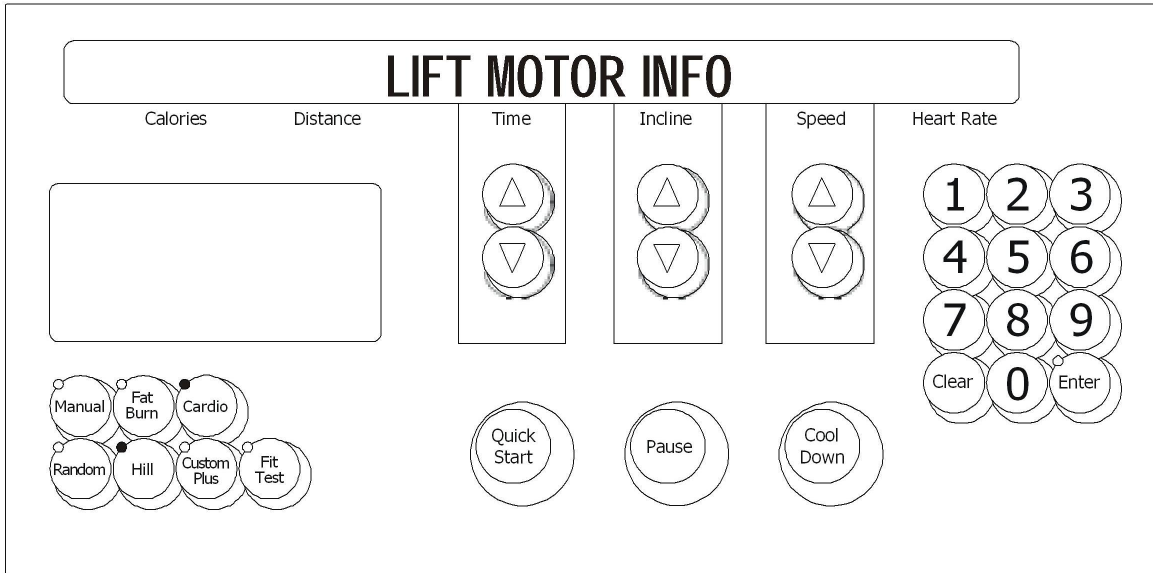

This area will allow the user to see the current information about the lift motor. The information will cover the following areas:

DISPLAYED INFORMATION

1. UNIT CONFIGURATION – NEGATIVE OR NON-NEGATIVE
2. CURRENT LIFT ON TIME IN MINUTES
3. BUCKET (Refer to table)

BUCKET - INCLINE AT PERCENTAGE OF RANGE			
BUCKET 0	-3.0 TO -2.1 PERCENT	BUCKET 10	7.0 TO 6.1 PERCENT
BUCKET 1	-2.0 TO -1.1 PERCENT	BUCKET 11	8.0 TO 7.1 PERCENT
BUCKET 2	-1.0 TO -0.1 PERCENT	BUCKET 12	9.0 TO 8.1 PERCENT
BUCKET 3	0.0 PERCENT	BUCKET 13	10.0 TO 9.1 PERCENT
BUCKET 4	1.0 TO 0.1 PERCENT	BUCKET 14	11.0 TO 10.1 PERCENT
BUCKET 5	2.0 TO 1.1 PERCENT	BUCKET 15	12.0 TO 11.1 PERCENT
BUCKET 6	3.0 TO 2.1 PERCENT	BUCKET 16	13.0 TO 12.1 PERCENT
BUCKET 7	4.0 TO 3.1 PERCENT	BUCKET 17	14.0 TO 13.1 PERCENT
BUCKET 8	5.0 TO 4.1 PERCENT	BUCKET 18	15.0 TO 14.1 PERCENT
BUCKET 9	6.0 TO 5.1 PERCENT		

The information will automatically scroll every 3 seconds or using any of the arrow keys will allow you to scroll through the wax motor information.

Pressing the 'PAUSE' key can LOCK the display. This will prohibit the scrolling of the information. Press the 'CLEAR' key to exit the Wax Motor Info and return to the System Info Menu.