
Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills DIAGNOSTICS: MAINTENANCE MENU

Upon entry into the area, the message is:

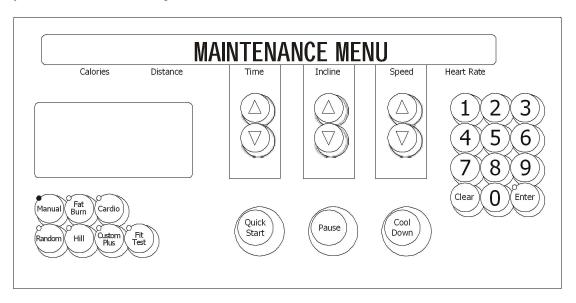

Followed by,

USE ARROW KEYS TO SCROLL THROUGH LIST Calories Distance Time Incline Speed

Using any of the arrow keys will allow you to scroll through the ten system maintenance procedures.

REPLACING BELT AND DECK REPLACING WAXER BAG REPLACING CONSOLE REPLACING MOTOR CONTROLLER REPLACING WAX LIFT BOARD REPLACING STOP SWITCH REPLACING OVERLAY BEZEL REPLACING MAIN MOTOR REPLACING LIFT MOTOR REPLACING WAX MOTOR

Press the 'ENTER' key to choose the desire procedure.

Upon the selection of the desired procedure, the system will gather all-important information concerning that procedure and log the procedure and details to the frame tag EEPROM. Upon successful completion of the log, the message "REPAIR LOGGED" will be displayed.

Press the 'CLEAR' key to exit the System Maintenance and return to the Service Menu.