


Technical Procedure

DAP/Cable Cross Cable Retainer Clip Replacement

Applies to: 9NP-D9302

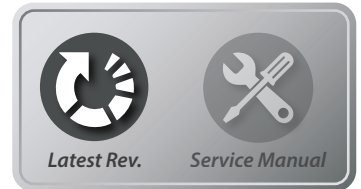


Required Tools:

- Retaining/Snap-Ring Pliers


Required Parts:

- **731-8124** "CLIP,CABLE RETAINER, BALL" REV. B


1. Use a pair of retaining/snap-ring pliers to remove the retaining ring from the swivel housing.

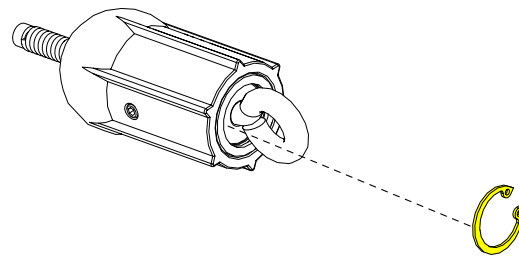

2. After the retaining ring has been removed, remove the eye bolt/bearing assembly.

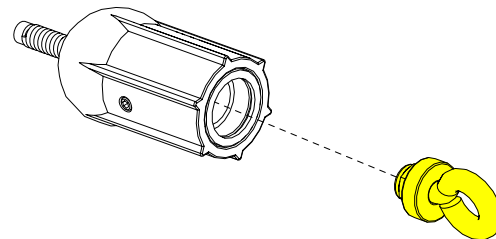


3. Push the cable end through the swivel housing, then remove the REV. A of the cable retainer.

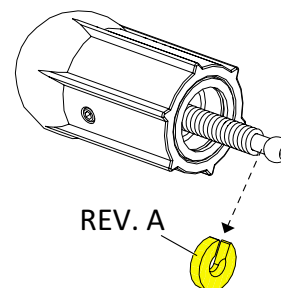


Technical Procedure

4. Install REV. B of the cable retainer.

NOTE: Ensure that the cable retainer is oriented properly so that the cable end sits in the recess of the cable retainer.

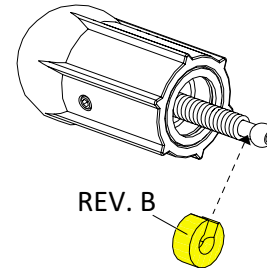

5. Reinstall the eye bolt/bearing assembly.

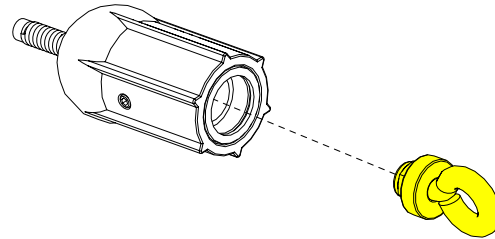

6. Reinstall the retaining ring back into the swivel housing.

NOTE: Inspect the retaining ring after install to ensure it is fully seated into the grooves of the swivel housing.

