

**\*Important Information about Body Masters Belts -- Please Read!**

Body Masters utilizes three different belts on its fitness equipment, and it is very important when maintaining and replacing belts on Body Masters equipment to use the correct belt. **Failure to use the correct replacement belt can reduce the life of the belt and may result in serious injury to the user. All belts must be replaced after 1 year regardless of usage. All polyamide and kevlar belts are date stamped when purchased. If the date stamp on a belt is more than 1 year old or does not have a date stamp it must be replaced!** If you have any questions about the proper selection or installation of belts on Body Masters equipment, please call customer service at 1-800-325-8964

The following machines use only the blue and white "Spectra" belt which is approximately 1/2 inch wide:


- MD 114 Multi Hip
- MD 114A Multi Hip
- S 114A Multi Hip
- MD 211 Torso Rotation
- S 600 Wristmaster



Spectra Belt

The following machines use only the Seigling polyamide GT40 belt which is 15/16 inch wide and 3.5 mm thick:

- MD 212 Lat Pulldown
- MD 212A Lat Pulldown
- S 212A Lat Pulldown
- MD 214 Low Row
- MD 214A Low Row
- CX 214 Low Row
- Master Trainer IA Lat Pulldown
- SMTM Super Multi-Trainer Lat pulldown
- SMTM Super Multi-Trainer Low row
- SMTM Super Multi-Trainer Tricep
- CM 240 Circuit Master Lat Pulldown
- CM 242 Circuit Master Low Row
- CM 226 Circuit Master Triceps Press

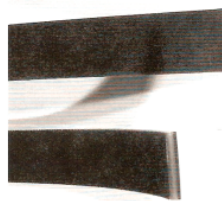

Polyamide Belt

All other Body Master belt driven machines use only the Mectrol kevlar belt which is 15/16 inch wide (pictured below):



Kevlar Belt